Neo Fitting Guide - Distance Selection

Part Number	Description	Machines that can be applied
41524660	KIT Distance Selection	Neo

41524660: BILL OF MATERIALS:

Item	Part No.	Description	Qty
1	43317770	20 Selection Button Board	1
2	43232120	Power Interface Link (Fitted to PCB)	1
3	43234090	Voltage Controller loom	1
4	82045430	Point of Sale Sticker	1
5	81066730	Installation Instruction	1

Neo Fitting Guide - Distance Selection

1. Open the machine door.
2. Turn the machine off with the power switch inside the machine top left corner.
3. Remove cup turret.
4. Undo the two screws to gain access to the selection keyboard.

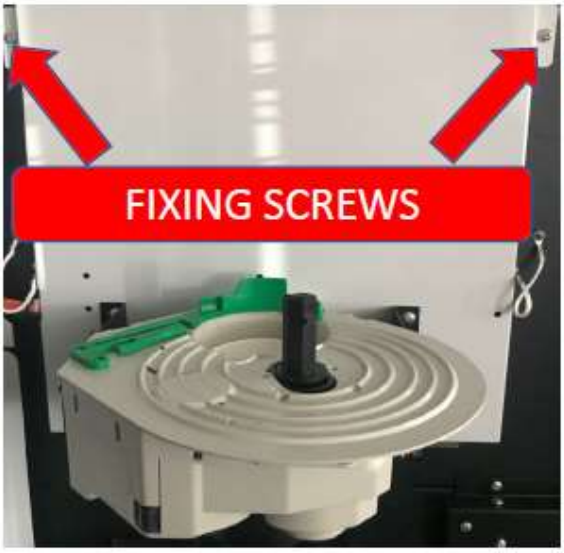

5. Let the white panel come towards you.
6. You will now see the rear of the selection keypad and the OLED display.
7. Take a photo of the wires that connect to both the keypad & the OLED display for reference.
8. Gently disconnect the looms.

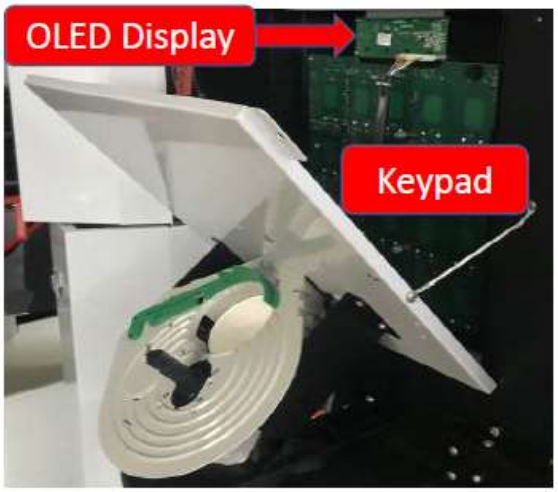

9. Using a Philips screwdriver loosen the 4 fixing screws that secure the metal frame that the keypad is attached to.
10. Now gently move the black metal frame backwards, there are slots in the metal that will allow the frame to come off.

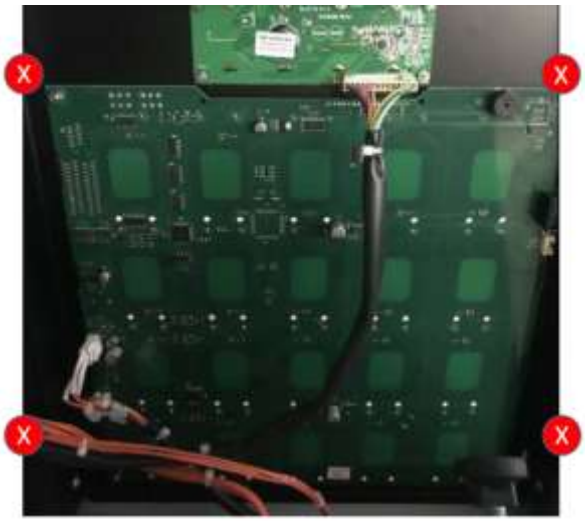

Guide part number: 81066730

Neo Fitting Guide - Distance Selection

11. There are 4 fixing nuts locations marked ● once you have removed them the selection board will lift off the studs, take care not to lose the white nylon spacers that the board sits on.

12. Handle the selection keypad with care, there are components on the back that can be damaged if care is not taken, they are marked by the following image ✸

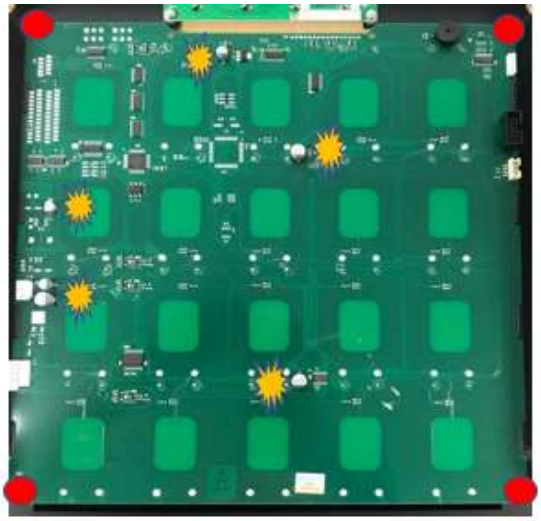

13. Place the selection keypad on an ESD protected surface i.e. Pink bubble wrap, with decals facing you.

14. Carefully remove the black insulating tape from the front of the decals.

15. Take care when removing insulating tape.

16. Make a note of the decal locations, then remove from the frame

17. Take the new selection keypad and rebuild with selection decals and insulating tape to cover the gaps as shown on previous sheet.

18. Re-fit the selection keypad with link fitted to the metal frame

19. Re-fit metal frame with selection keypad to the machine.

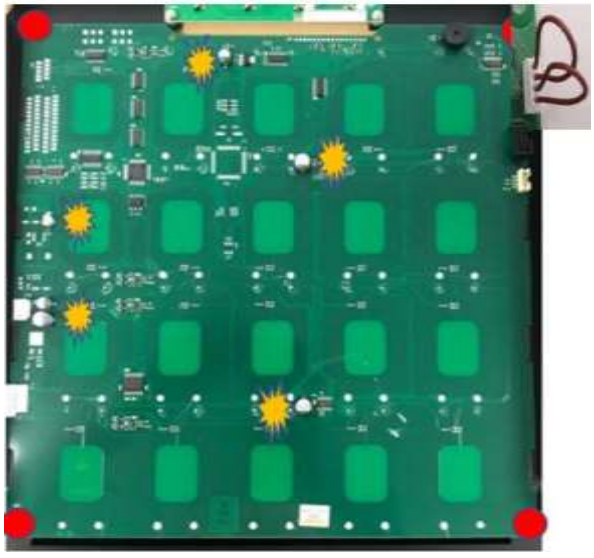

Guide part number: 81066730

Neo Fitting Guide - Distance Selection

20. Once you have fitted the selection keypad take care to reconnect the looms adding the new interface that was supplied with the new selection keypad.

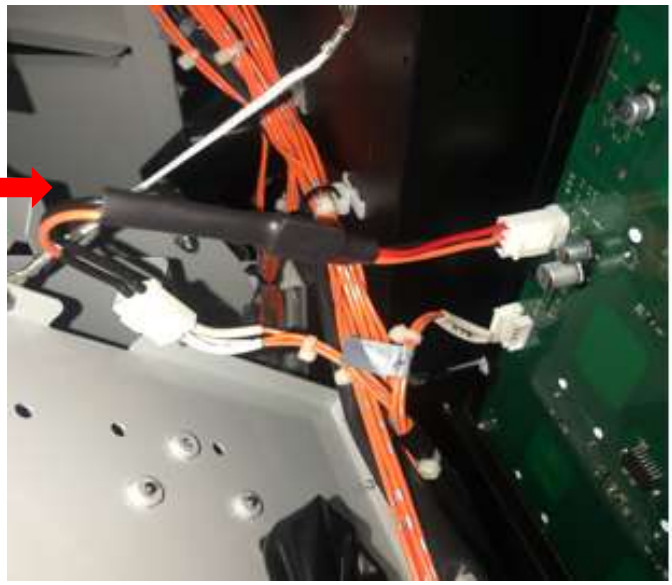

21. Once all connections have been made turn the machine on to check that the selection keypad lights up along with the OLED display.

22. Close the white metal cover and replace the cup turret.

23. Close the machine door and test vend each selection using Distance Selection

24. Fit Label to the front of the machine.

Guide part number: 81066730