AZKOYEN GROUP

Technical information

VITRO S1

AZKOYEN GROUP

Avda. San Silvestre, s/n
31350 Peralta (Navarra) Spain
Tel.: +34 948 709 709

Cliente.azkoyenvending.es

■■ INDEX ■■

1. INTRODUCTION

1.1. DEFINITIONS

1.2. MODELS

1.3. PRINCIPAL TECHNICAL CHARACTERISTICS

2. DESCRIPTION OF COMPONENTS

2.1. PRINCIPAL COMPONENTS

2.2. HYDRAULIC CIRCUIT

3 INSTALLATION AND SWITCHING ON

3.1. INSTALLATION

3.2. WATER CONNECTION

3.3. ELECTRIC CONNECTION AND START UP

3.4. FILLING CANISTERS

3.5. FILLING BOILER

4. ERROR MESSAGES ON DISPLAY

5. CONTROL POINTS

6. CLEANING AND MAINTENANCE

7. WORKING CONDITIONS AND NORMS

8. DIMENSIONS

1. INTRODUCTION

The semiautomatic machines of the ***Vitro S1*** series are destined for the elaboration of espresso coffee and soluble drinks consisting of the mixing of warm water with product in powder or granulated.

In the rest of the book, and for major briefness, the elements that are indicated will be named like:

The machines of the series Vitro S1: machine or machines.

The coffee brewer or coffee group: group or brewer.

The electroválvulas: EV.

1.1. DEFINITIONS

Espresso coffee: Infusion of coffee elaborated according to the following conditions:

- 7 g of ground coffee.
- The temperature of the infusion water between 92º C and 96º C.
- The water pressure at 8 kg/cm²La presión del agua de *erogación* a 9 kg/cm².
- The infusion time of the coffee between 12 and 20 seconds.
- The volume of water in the infusion 50 ml.

Infusion: this is the name given to the process of passing hot water through the ground coffee to extract its oils and essences.

- **Volumetric infusion**: when the process of infusion uses a constant volume of water.

Coffee tablet: the residual compressed coffee grounds after the infusion process.

Programming mode: when the *machine* is ready for any of its functions or parameters to be programmed.

Working mode: when the *machine* is in the working state and ready to prepare any of the services it offers.

1.2 MODELS

The **Vitro S1** S range is made up of models to elaborate *espresso coffee* and instant beverages.

- The models with **espresso** coffee elaborate espresso coffee and can elaborate instant beverages.

- The **instant** models only elaborate instant beverages.

Models

Vitro S1 machine range; **Espresso, Espresso +2** and **Instant**

1.3 PRINCIPLE TECHNICAL CHARACTERISTICS

- To push a button is enough to elaborate any service; espresso or instant.
- It grinds the coffee when it is ordered.
- Characteristics of each machine model:

Model	Coffee beans	Instant coffee	Decaffeinated	Chocolate	Milk	Hot water
S1 Espresso	Yes					Yes
S1 Espresso+2	Yes			Yes	Yes	Yes
S1 Instant		Yes	Yes	Yes	Yes	Yes

- The water temperature is programmable.
- The ground coffee dose is programmable between 5 g and 8 g.
- *Water pump* for water pressure incorporated in the *machine*.
- Volume dosage of water in the different *espresso coffee* services is programmable.
- Electrical consumption:

VITRO S1 espresso and soluble	Voltage	Power	Longitud
Mains voltage	See characteristics plate		
Heating element	See characteristics plate	1100 W	
Mains flex			1.800 mm

2. DESCRIPTION OF COMPONENTS

2.1. MAIN COMPONENTS

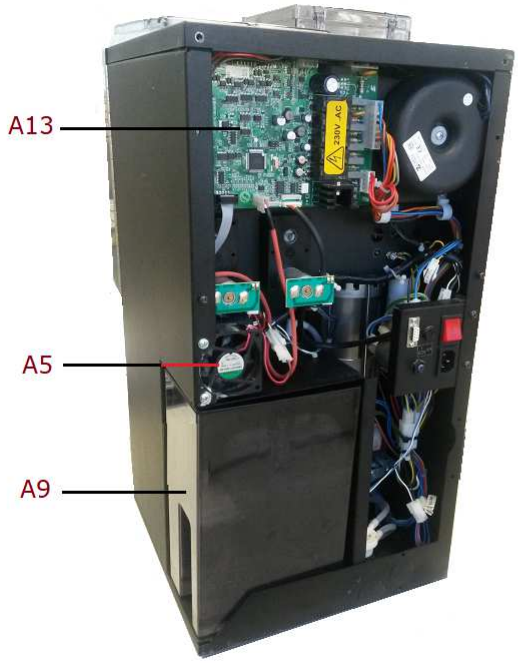

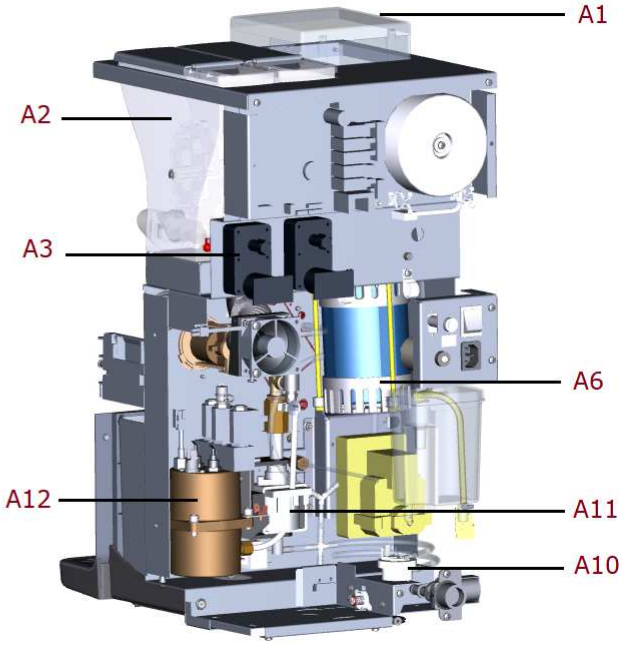

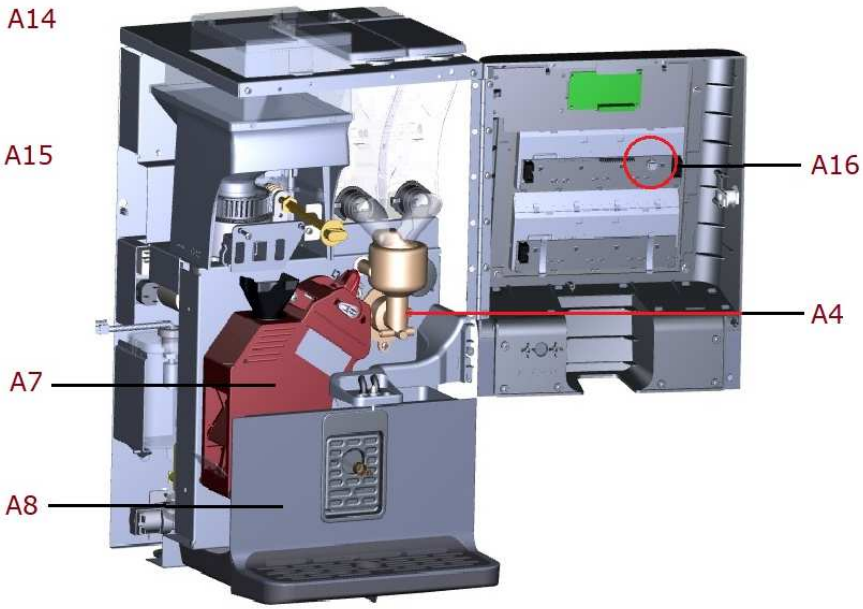

A1. Coffee beans hopper/canister

It has a capacity of 1,1 kilograms.

A manual lock allows the user to remove the canister without loosing any bean. Before removing the canister, it is needed to unlock the top cabinet cap which is fixed with 4 screws.

A2. Instant product hopper

With a capacity of 1,6 litres in each one of the hoppers of instant for instant products.

The approximate weight of the product is:

	Capacity in grams		
Product	Vitro espresso	Espresso+2	Instant
coffee			400
Decaffeinatted			400
Milk		600	600
Chocolate		800	800

A3. Product extractor

This motor will move the spindle inside the canister to move instant poder out to the mixing bowls. These motors are from Componenti.

Motor manufacturer: Componenti
Voltage: 24 V cc
Speed: 140 rpm

A4. Beaters/Mixers/Whippers

The mixing of the products with hot water from the boiler is done with these elements.

B1. Assembly beater motor B2. Mixer blade impellor B3. Whipper chamber B4. Stream hood B5. Screw B6. Mixer fixing pivots B7. Mixing motor clips	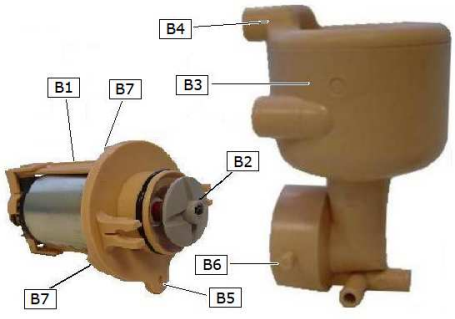

A motor spins the mixing Blade. Motor technical data:

Motor manufacturer	Mabuchi
Voltage	34 Vcc
Power	20 w
Speed	15.000 rpm

Mixing assy can be removed by pulling untill free the clipping pivots. Then unscrew the fixing screw and twist the motor to the right to set free the clips.

In case of total dissambly; pay attention to the details shown in the pictures next to this text.

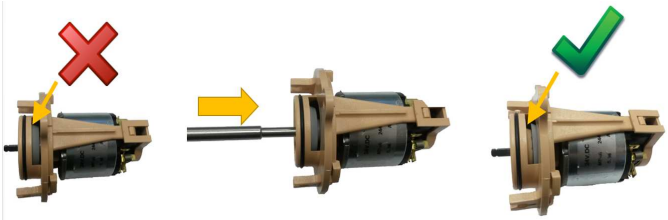

As shown in the pictures, grey inside base must be moved to the motor. If not, the base will be in friction provoking a break in the motor.

The tool reference 10040130 can be used as a help.

A5. Extractor

Extractor

The steam and vapour that is generated by the beaters can reach the product containers and if they become damp they form lumps in the powder. This consequently results in the irregular extraction of the product. To avoid this, the extractor is used to remove the steam and vapour from the interior of the machine. It works on 24 Vdc

A6. Coffee grinder

It's the M03 Azkoyen model.

Technical characteristics:

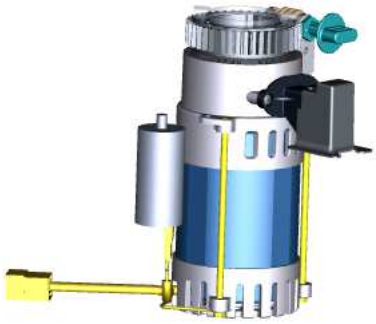

Voltage	230 Vac
Nominal power	400 w
Speed	1250 rpm
Diameter of the grinders	63 mm
Grind points	0.026 mm

Turning the handle anticlockwise gives a coarser grind and moving it clockwise gives a finer grind. The grinder used in Vitro s1 is regulated by time. Grinder programming in function 315 (check details in programming manual)

To get the desired amount of coffee for your Service: first adjust the **"grinding point"** using the handle. After set a time for the grinder in the function 315 **"grinding time".** It is advised to scale the ground coffee in each Service. Last, adjust the piston washers in the best position (check in section A7. Coffee Group+Piston).

Turning the handle that adjusts the grinding point will have an effect on ground coffee granulometry, but also on ground coffee Flow. Remember that grinder is controlled by time: 3 seconds of coarse coffee will make more grams than 3 seconds of thin coffee.

It can be said that turning right or left the grinding point handle will vary the amount of coffee ground for your Service. In that case, the grinding time set in function 315 must be modify as well to keep getting the desired amount of coffee for each Service.

A7. Espresso Group+Piston/Brewer

Made of resin, it is the element that the *machine* uses to make the espresso coffee.

The *group* has moving parts that are activated by a 24 Vdc motor that moves a crank which moves the *coffee* from the dosage element to the piston. At the same time it also moves a lever that activates a *micro switch*; this indicates the position of the *infusion element* to the control board.

To remove the group from its position of anchor, both must be turned levers that fix it to its support, such as indicated in the photograph. If the group was in brewing position, to remove it, it is necessary to remove the piston first, as indicated a side.	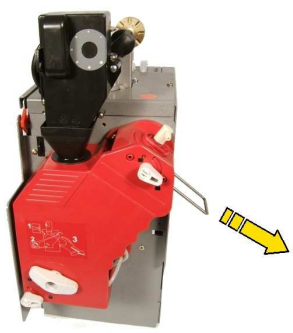 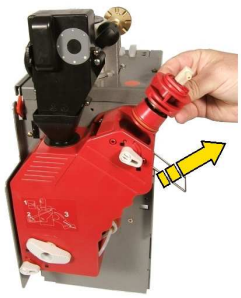
	Pull out the clip **Remove the piston**

To put the group back on the machine, it can be in any position and not matter that it has been turned out of the machine: Just put it in its place and fix its two anchor levers; the engine of the group will position it correctly.

C1. Piston

C2. Group

C3. Filter

C4. Holding handle

C5. Position microswitch

C6. group movement handle

C7. Group motor

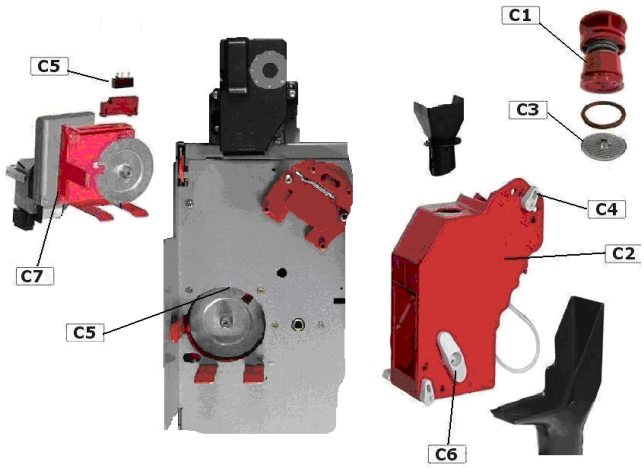

The *piston* has a spring and tow spacers that, depending on how it is placed, will vary the capacity of ground coffee the chamber will hold.

The possible regulation of the capacity of the *infusion element*, using the washer, and the position of the dosage handle are shown in the table below:

Dose	Piston washer position		Dosage position
5 g	Under	Under	1
5,5 g	Under	Under	2
6 g	Under	Over	3
6,5 g	Under	Over	4
7 g	Under	Over	5
7,5 g	Over	Over	6
8 g	Over	Over	7

A8. Tray of liquid residues and coffee cakes deposit

Coffee cakes deposit collects "coffee cakes" coming from coffee group. It has capacity for 60 cakes. After 60 coffee services the display will show a message asking to empty the deposit. If the counter want to be disabled use your laptop and the Configurator app to modify the settings cmq file.

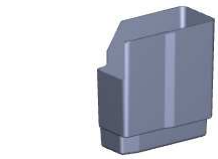

Tray of liquids collects all the liquid residues that the machine generates. It has capacity for 1 litre.

Both parts can be removed with the machine lock. Pull the tray to remove both parts.

A9. Water Deposit

It has capacity for 4 litres. It is at atmospheric pressure and temperature. From this deposit is taken the water to elaborate the *espresso coffee* and instant beverages If you wish to connect the machine to the mains/water network, there is a separate kit available.

A10. Volumetric counter

Its function is to measure the quantity of water that is pumped for the elaboration of the espresso coffee

A blade inside it spins boosted by the water flow. Two magnets on the blades activate a terminal locate on the counter cap. The three terminals on the cap are positive, negative (5V cc) and the _Π_ (square signal symbol). If it is measured between negative and _Π_ when water is pumped through the counter it will be gotten the voltage difference 0V and 5V. In a digital tester it will be shown 2.5V which indicates that the counter is working well.

A11. Water pump

This element has the job of pumping water from the cold water deposit to the hot water boiler; the cold water pushes the hot water towards the EVs for the instant products or towards the *infusion element* for making espresso coffee

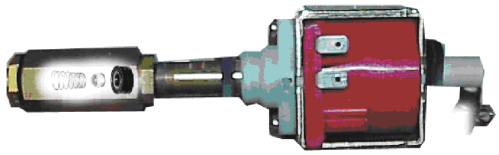

When an espresso coffee is elaborated, the water pressure needed is quite high to be able to pass through the compressed ground coffee in the *infusion element*. This resistance the coffee offers makes the water pressure in the boiler increase up to a pressure of 9 Kg/cm². At this pressure the by-pass opens allowing a small amount of water to return; sufficient to prevent the water pressure from going over the 9 Kg/cm².

The by-pass is a small hole covered with a ball that is held in place by a spring. This spring will hold a pressure of 9 Kg/cm², but over this pressure it compresses and allows the water to pass.

The pressure of 9 Kg/cm² is considered the ideal for elaborating espresso coffee.

When the instant beverages are elaborated, there is no resistance offered and so during there elaboration the water pump works at lower pressures than when elaborating espresso coffees.

Technical characteristics:

Voltage	230 Vdc
Power	48 w
Working pressure	9 Kg/cm²
Maximum pressure	12 Kg/cm²

The pump has an anti return valve that prevents the return of water from the boiler.

A12. Boiler

The boiler works under pressure and has a capacity of 320 cc.It warms up the water for the elaboration of the products, espresso coffee or soluble products.

D1. Electrovalves
D2. Temperature sensor (PTC)
D3. Clixon, rated at 120º C
D4. 1100 W heatting element
D5. upper cover
D6. lower cover

The boiler is made of brass and does not need any device to control the level of water as the boiler fills automatically from the moment the machine is switched on. After this the water that is used is replaced with water from the cold deposit so the boiler is always full.

There are three outlets; one through a 3-way *EV* for the elaboration of espresso coffee. This *EV* has an outlet from the boiler, another goes to the *infusion element*, and the third that, at rest, allows the *infusion element* to be at atmospheric pressure.

E1. Solenoid
E2. Valve
E3. 3rd outlet

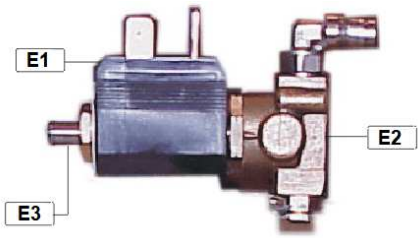

When the machine is in the espresso coffee making process, the third is closed while the outlet from the boiler and the inlet to the *infusion element* are open to each other.

F1. 3rd outlet closed
F2. To the infusion group
F3. From the boiler

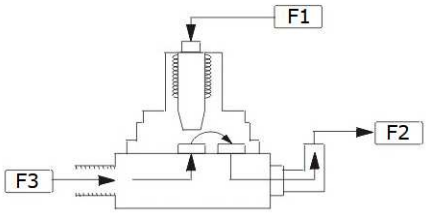

When the machine finishes elaborating an espresso coffee, the *EV* goes to rest state and closes the outlet from the boiler leaving the *infusion element* open to the third outlet. In this way the water that did not pass through the coffee and was retained in the *infusion element* goes out through the third outlet to the residue bucket.

The water recedes back from the *infusion element* towards the third outlet because of the pressure it was submitted to by the pump in the infusion process.

G1. 3rd outlet open
G2. Infusion element joined to atmospheric pressure
G3. Boiler water closed

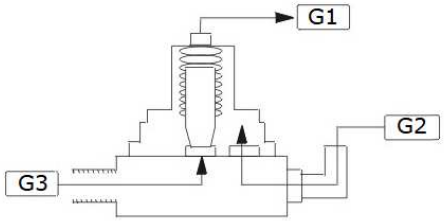

Technical Characteristics:

Heating element voltage	230 Vca
Power	1.100 w
Temperature programming	70ºC -94ºC
Safety protection with manual reset	120º C
Voltage of 3-way EV	24 Vcc
Power of 3-way EV	10 w
Maximum pressure of EV	14 Kg./cm²
Working temperature of EV	-10º C a 140º C

Temperature control of the water in the boiler is done with a PTC100. Default Temperature from factory is programmed to 85ºC, it can be programmed up to 94ºC.

It must be taken into account that, depending on the altitude at which the machine is installed, the water can boil at a temperature below 100ºC.

Altitud (meters) (above sea level)	**Boiling water temperature**	**Max. advised temp. in boiler (F461)**
1500	95ºC	92ºC
1800	94ºC	91ºC
2100	93ºC	90ºC
2400	92ºC	89ºC
2700	91ºC	88ºC

The following table shows the resistance values that the PT100 gives according to the temperature that it is submitted. Boiler Tª can be programmed in function 461 with a max. of 94ºC.

ºC	0	1	2	3	4	5	6	7	8	9
0	100,00	100,39	100,78	101,17	101,56	101,95	102,34	102,73	103,12	103,51
10	103,90	104,29	104,68	105,07	105,46	105,85	106,24	106,63	107,02	107,40
20	107,79	108,18	108,57	108,96	109,35	109,73	110,12	110,51	110,90	111,28
30	111,67	112,06	112,45	112,83	113,22	113,61	113,99	114,38	114,77	115,15
40	115,54	115,93	116,31	116,70	117,08	117,47	117,85	118,24	118,62	119,01
50	119,40	119,78	120,16	120,55	120,93	121,32	121,70	122,09	122,47	122,86
60	123,24	123,62	124,01	124,39	124,77	125,16	125,54	125,92	126,31	126,69
70	127,07	127,45	127,84	128,22	128,60	128,98	129,37	129,75	130,13	130,51
80	130,89	131,27	131,66	132,04	132,42	132,80	133,18	133,56	133,94	134,32
90	134,70	135,08	135,46	135,84	136,22	136,60	136,98	137,36	137,74	138,12
100	138,50	138,88	139,26	139,64	140,02	140,39	140,77	141,15	141,53	141,91
110	142,29	142,66	143,04	143,42	143,80	144,17	144,55	144,93	145,31	145,68
120	146,06	146,44	146,81	147,19	147,57	147,94	148,32	148,70	149,07	149,45
130	149,82	150,20	150,57	150,95	151,33	151,70	152,08	152,45	152,83	153,20
140	153,58	153,95	154,32	154,70	155,07	155,45	155,82	156,19	156,57	156,94
150	157,31	157,69	158,06	158,43	158,81	159,18	159,55	159,93	160,30	160,67
160	161,04	161,42	161,79	162,16	162,53	162,90	163,27	163,65	164,02	164,39
170	164,76	165,13	165,50	165,87	166,24	166,61	166,98	167,35	167,72	168,09
180	168,46	168,83	169,20	169,57	169,94	170,31	170,68	171,05	171,42	171,79
190	172,16	172,53	172,90	173,26	173,63	174,00	174,37	174,74	175,10	175,47
200	175,84	176,21	176,57	176,94	177,31	177,68	178,04	178,41	178,78	179,14
210	179,51	179,88	180,24	180,61	180,97	181,34	181,71	182,07	182,44	182,80
220	183,17	183,53	183,90	184,26	184,63	184,99	185,36	185,72	186,09	186,45
230	186,82	187,18	187,54	187,91	188,27	188,63	189,00	189,36	189,72	190,09
240	190,45	190,81	191,18	191,54	191,90	192,26	192,63	192,99	193,35	193,70
250	194,07	194,44	194,80	195,16	195,52	195,88	196,24	196,60	196,96	197,33
260	197,69	198,05	198,41	198,77	199,13	199,49	199,85	200,21	200,57	200,93
270	201,29	201,65	202,01	202,36	202,72	203,08	203,44	203,80	204,16	204,52
280	204,88	205,23	205,59	205,95	206,31	206,67	207,02	207,38	207,74	208,10
290	208,45	208,81	209,17	209,52	209,88	210,24	210,59	210,95	211,31	211,66
300	212,02	212,37	212,73	213,09	213,44	213,80	214,15	214,51	214,86	215,22
310	215,57	215,93	216,28	216,64	216,99	217,35	217,70	218,05	218,41	218,76
320	219,12	219,47	219,82	220,18	220,53	220,88	221,24	221,59	221,94	222,29
330	222,65	223,00	223,35	223,70	224,06	224,41	224,74	225,11	225,46	225,81
340	226,17	226,52	226,87	227,22	227,57	227,92	228,27	228,62	228,97	229,32
350	229,67	230,02	230,37	230,72	231,07	231,42	231,77	232,12	232,47	232,82
360	233,17	233,52	233,87	234,22	234,56	234,91	235,26	235,60	235,96	236,31
370	236,65	237,00	237,35	237,70	238,04	238,39	238,74	239,09	239,43	239,78
380	240,13	240,47	240,82	241,17	241,51	241,86	242,20	242,55	242,90	243,24
390	243,59	243,93	244,28	244,62	244,97	246,69	245,31	245,66	246,00	246,35
400	247,04									

A13. Control board

Vitro s1 range machines have only one pcb, called control board. It is powering the rest of components and managing the machine.

This board is the same as in Zen, Zintro or Vitro s5, but with different software.

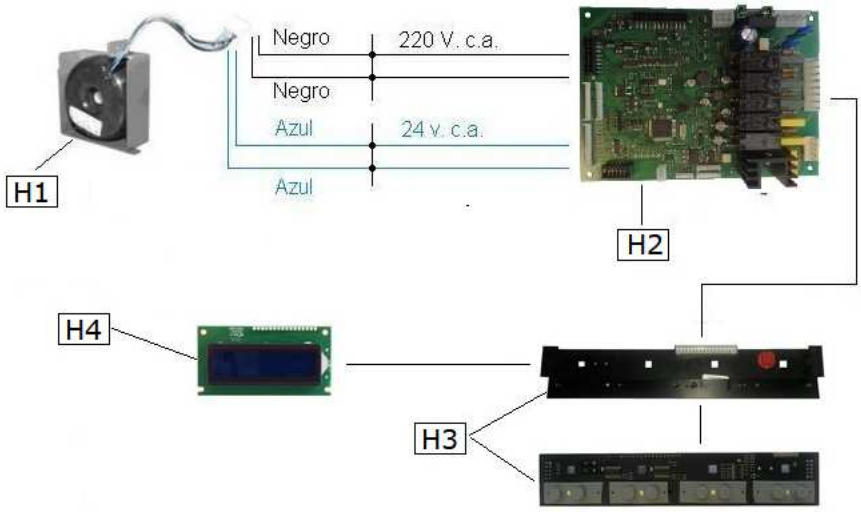

H1. Transformer
H2. Control pcb
H3. Display
H4. Push buttons board

H1 Transformer "technical characteristics":

Primary	230 Vca
Secondary (blue-blue)	24 Vca
Power	88 VA

A14. Display

All Vitro S1 range machines come with a LCD display blue colour. 2 lines with 16 characters each. It is easy to remove it, it is fixed with 4 clic points.

A15. Push buttons board.

Selection buttons are in a LEDs backlight frame. There are two boards with 4 buttons each.

Product labels are two strips with 4 products each, iluminated by Led strips.

The 2 button boards are connected to the control board.

Remove the display before removing the panel.

A16. Programming button

This button allows the access to the machine programming.

A quick push gives access to operator functions.

Press the button for 5 seconds to get access to all programming functions. Select here the ones you wish t osee in operators menu.

First 4 selection buttons are used to navigate in the programming functions. (see in programming manual)

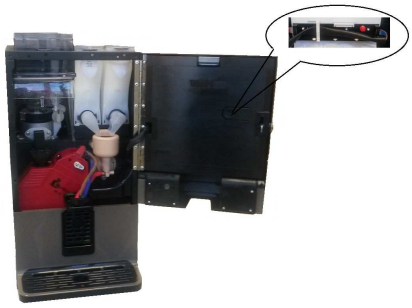

2.2. Hydraulic circuit

In the following diagram are represented all the elements of the machine that are needed to control and make the water reach the *infusion element* or the instant beverage beaters.

I1. Water deposit

I2. Flowmeter

I3. Pressure pump

I4. Overpressure pump

I5. Boiler

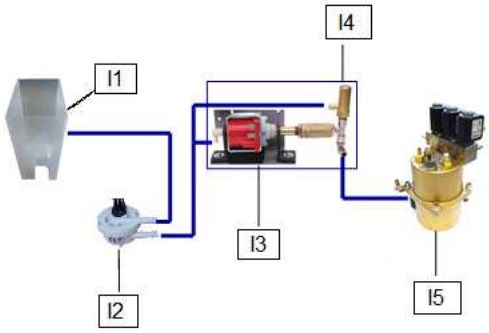

3. INSTALLATION AND SWITCHING ON

3.1. Installation

The power supply of the machine requires a socket, or another system, that allows its disconnection. The method used must guarantee the complete disconnection of both poles.

Elemental safety requirements:

a) Never touch any mechanisms with wet hands or feet.

b) Never connect or use the machine barefoot.

c) Never pull on the flex to unplug the machine.

d) Never leave the machine exposed to the elements: sun, rain, snow, etc.

3.2 Water connection

Mains supply KIT

The machine can work with its water deposit of 4 litres (see point A.14) or connected to the mains. To connect the machine to the mains, use a **¾" male** connection. The mains supply must provide drinking water at a minimum of 5 litres/minute and a pressure of between 0.5 and 10 kg/cm².
Following low voltage safety requirements, the water connection and the socket must be separated by at least **1 metre.**

Depending on the quality of the water, hardness, chlorine, bleach, etc, the connection should be complemented with a filter.
If the machine is fitted with a filter, the minimum water pressure should be **1.5 Kg/cm².**

3.3 Electrical connection

The supply voltage of the machine is indicated in the characteristics plate, there is one inside the machine and another on the back. Depending on the machine code and the country, it can operate at 110 or 220 Vac, with a frequency of 50 or 60 Hz. The installation must have:

- An earthed socket
- A minimum power rating of 2000 w
- The installation site must have a breaker switch and a good ground connection

3.4 Filling the product containers

To put products in the containers, you should lift the cover of the machine. Otherwise it is necessary to remove the container from the machine.

After filling the containers for instant beverages, it is advised to request a service of each as the first time it is used, only a small quantity of product is served

1. coffee beans hopper
2. soluble product hoppers

1

2

Now the machine can be switched on.

3.5 Filling the hot water boiler

Start the machine and hot water boiler will be filled automatically.

In the espresso coffee machines, the following process occur:

- The volumetric counter is tested, and the boiler is filled with the EVs closed. When the counter stops spinning, the boiler is full. Then the instant product EVs open to let out the air in the lines and boiler.

4. ERROR MESSAGES

In the following table there are described the errors that the machine can detect.

LOW TEMPERATURE	The machine displays this warning for approx. 1 min. on being started up.
ERROR: NO WATER	Check the water supply. Fill the water tank
NO COFFEE BEANS	Load the hopper with coffee Check the position of the group outlet shutter
WASTE BIN FULL	Remove the waste tray, clean it and refit it
LONG DISTRIBUTION	Adjust the grinding time to coarser. Clean the group showers Check that there is voltage to the input solenoid.
RESIST. FAULTY	Element broken or disconnected
TEMP.SENSOR ERR.	Probe broken or disconnected
FAIL.WATER LEVEL	Check mains pressure. Input solenoid or level ball broken or disconnected.
DOSAGE ERROR.	Dosser broken or disconnected
F.ESPRSS.UNT.POS	The group motor does not work. The position detector does not work properly.
NO WASTE BIN	The tray is missing or not fitted properly.

5. CONTROL POINTS

Heatting element

Meassured in the **control board** in the conector jp11

Between pins 1 and 3, will be 220 Vca when heatting element is working. (if 10A fuse is fine)

Erogation pump

Meassured in the **control board** in the conector jp10

Between pins 1 and 7 will be 220 Vca when ulka pump is working.

Erogation group motor

Meassured in the **control board** in the conector jp10

Between pins 2 and 7 will be 220 Vca when the group is working.

Coffee doser

Meassured in the **control board** in the conector jp10

Between pins 3 and 7 will be 220 Vca when doser is activated.

Grinder

Meassured in the **control board** in the conector jp10

Between pins 4 and 7 will be 220 Vca when grinder is working.

Transformer

Meassured in the **control board** in the conector JP12

Pins 1 and 2 = 220 Vca (black looms).

Pins 4 and 5 = 24 Vca (blue looms).

Pressure electrovalve

Meassured in the **control board** in the conector jp8

Between pins 1 and 4 will be 25 Vcc when la electrovalve is activated.

Volumetric counter

Meassured in the **control board** in the conector jp1.

Pin 1 corresponds to +, pin 4 is ground and pin 12 is signal.

When volumetric is turning. The multimeter will show 2,5 Vcc meassuriing between pins 12 and 4.

Doser microswitch

Meassured in the **control board** in the conector jp1.

Between pins 4 and 11 will be 5 Vcc when doser is full.

Between pins 4 and 11 will be 0 Vcc when doser is empty.

Group motor microswitch

Meassured in the **control board** in the conector jp1.

Between pins 4 and 10will be 5 Vcc with group in erogation position.

Between pins 4 and 10will be 0 Vcc with group in charge position.

Residue tray microswitch

Meassured in the **control board** in the conector jp1.

Between pins 4 and 9 will be 0 Vcc when tray is in position.

Between pins 4 and 9 will be 5 Vcc when tray is not in its in position.

Floater microswitch(with hydraulic connection to the mains)

Meassured in the **control board** in the conector jp1.

Between pins 4 and 8 will be 5 Vcc when there is no water.

Between pins 4 and 8 will be 0 Vcc with full deposit.

Temperature sensor

Meassured in the **control board** in the conector jp16. values of resistance(ohms) should be meassured (see values in table of PTC).

6. CLEANING AND MAINTENANCE

❒ Daily

- *Solid waste bucket*. Empty the coffee residues and rinse with clean water.
- *Liquid collector tray*. Clean with a water and dish washing liquid solution.
- *Beaters*. Carry out various auto-cleaning operations by pressing button "B" on the programming handset.

❒ Weekly

- *Infusion group*. Remove it from the machine and rinse it under a tap to remove coffee particles. Before replacing the group, dry it with a cloth.
- *Beaters*. Remove the beaters, the outlet tubes and the chamber from the machine, and clean everything with a water and dish washing liquid solution. If necessary, only use a soft cloth to clean so as not to scratch their surfaces.

❒ three monthly

- *Product hoppers*. Remove them from the machine and empty them. Clean them with water and dish washing liquid solution. Dry them before replacing into the machine. Clean the supports where the hoppers are fitted.
- *Coffee bean hopper*. Carry out the same as with the product hoppers.

❒ Depending on the use of the machine

- *Piston filter*. Every 15,000 services, it is recommended to remove and clean it. If necessary, it can be cleaned with a non metallic brush. If the holes are blocked, do not introduce sharp objects into the holes to clean them. It is recommended to replace the filter with a new one when is becomes blocked.
- *Infusion group filter*. Clean the infusion group filter at the same time as you clean the piston filter. To remove the filter without damaging it, follow the guidelines below: Move the group to the coffee cake extraction position. Hold the group and the lever with one hand while loosening the filter screw with the other. On replacing the screw it is recommended to use Loctite 243 or a similar product to keep it tight.
- *Piston seal*. Replace every 30,000 services
- *Group seals*. Replace every 60,000 services. To get to these it is necessary to remove the group filter. They are reachable by following the explanation below.

1. Remove the nut that holds the spindle shaft at the bottom of the group, it is recommended to support with a screwdriver the shower filter at the same time.

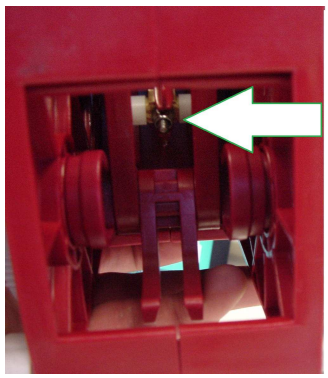

2. Push the shaft from the bottom and remove the filter holder.

3. Press on the clips(one on each side) shown in the picture below to release the part where the o-ring gaskets.

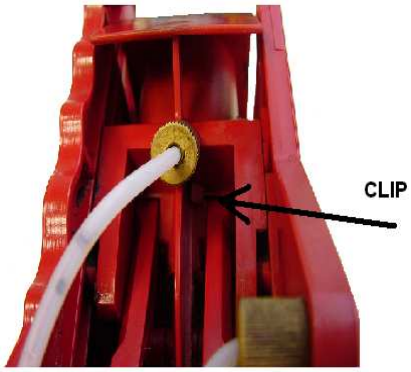

4. Once replaced the gaskets, replace lids in the group.

7. WORKING CONDITIONS AND NORMS

The optimum working conditions of this equipment is achieved by fulfilling the following requirements:

- Temperatures:
  - Storage: -25 to + 70ºC.
  - Working: 0 to 50º C.
  - Maximum relative humidity without condensation 85%

- Norms that are met:
  - The coffee machines meet the following EU directives: Directive 73/23/CEE electrical safety and Directive 89/336/CEE electromagnetic compatibility.
  - The mains connection cable has an earth wire as established in the electrical safety norm.
  - The boiler has a temperature sensor that controls the connection and disconnection of the heating element automatically.
  - The boiler has a temperature clixon that disconnects the heating element when it reaches 120º C.
  - EN 60335-2-63:96
  - EN 60 335-1(88) + A2(88) + A5(89) + A6(89) + A51(91) + A52(92) + A53(92) + A54(92) + A55(93)
  - EN 55014-1
  - EN 61000-3-2
  - EN 61000-3-3
  - EN 55014-2:98 (EN 61000-4-2, 4-3, 4-4, 4-5, 4-6, 4-7, 4-8 and 4-11)
  - **CE**

- For the correct working of all the elements, the maximum inclination the machine should have on any of its axis should be ± **5º.**

8. VOLUMÉTRIC DIMENSIONS

Measurements in mm and weight in Kg.

Model	width	height	depth	weight
Vitro S1 Se	305 (X)	590 (Y)	410 (Z)	25,3 kg
Vitro S1 Se+2	305	590	410	27,2 kg
Vitro S1 Si+4	305	560	410	20,7 kg